



ZQRACING

GAMING OFFICE CHAIR

Owner's Manual



ZQRacing.com.au



Facebook.com/ZQRacing

 


Twitter.com/ZQRacing

Please read the instruction carefully before assemble your new chair,
please keep this manual for future use.

Main Box Contents

For reference only refer your actual chair as standard

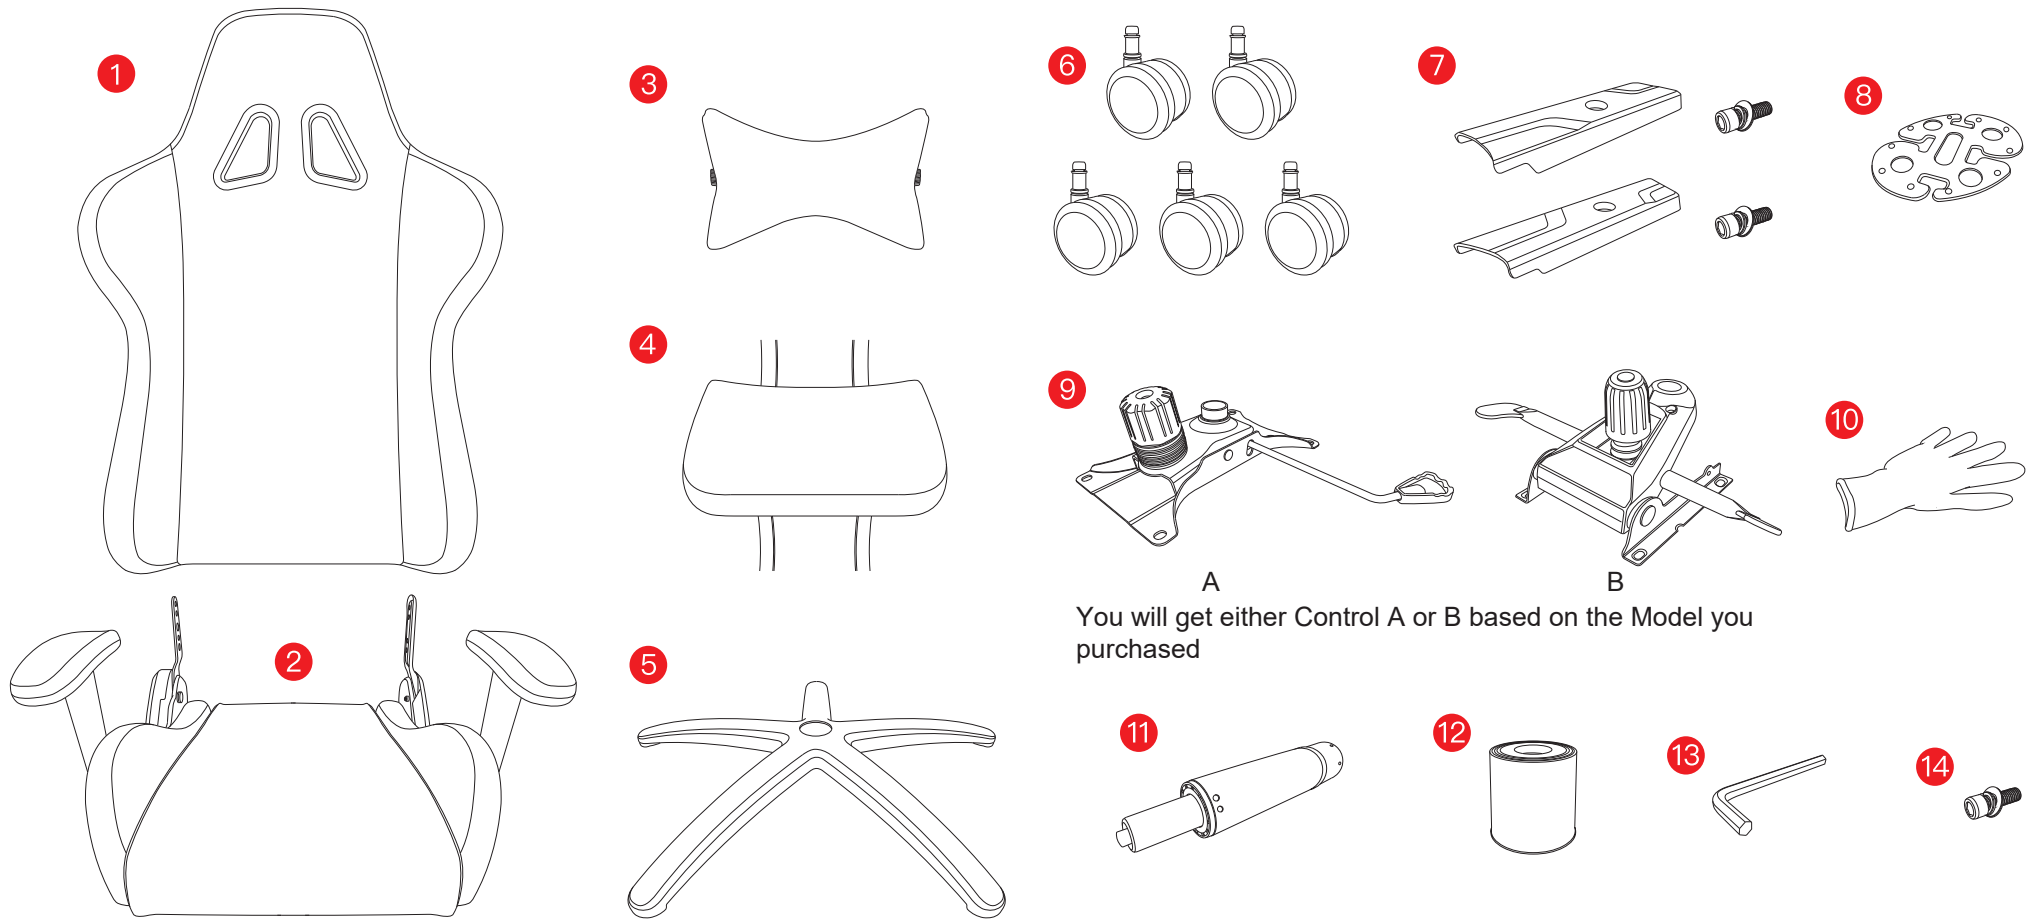

1. Backrest

2. Seat base

3. Head pillow

4. Lumbar cushion

5. Wheel base

Pictures are for demonstration only and may differ from your actual chair in appearance and features.

6. Wheels

7. Side covers with bolts

8. Pillow strip connector

9. Control unit A or B

10. Groves

11. Hydraulic lift cylinder

 
12. Telescoping cover

13. Hex Key


14. Spare bolt

Assembly Instruction


Please put on gloves for installation

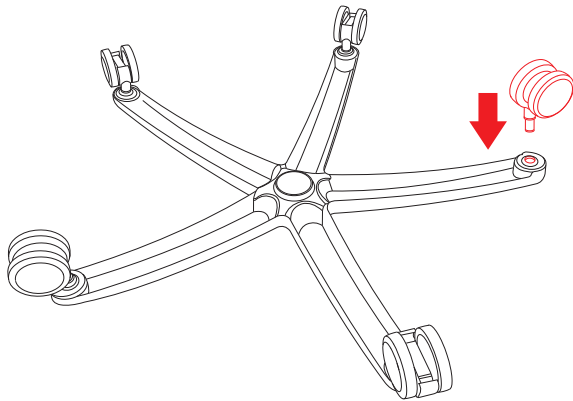

 
- 1 One by one, insert and push the wheels into the base.

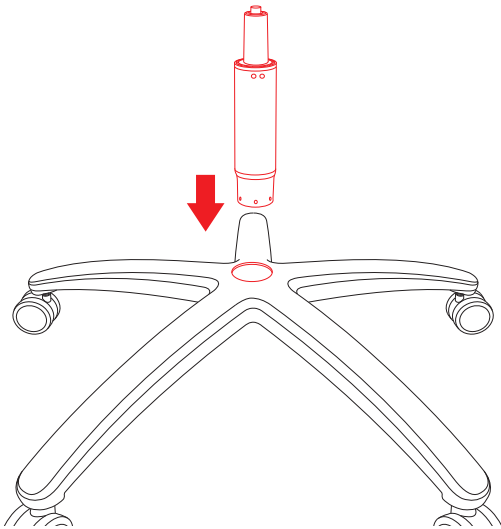

 
- 2 Insert hydraulic cylinder into the centre hole of the base. Remove the red protective cap on top if there was any.

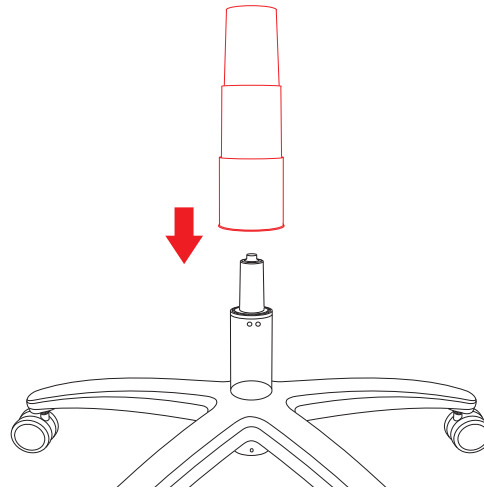

 - 3 Place telescoping cover on top of the hydraulic lift cylinder

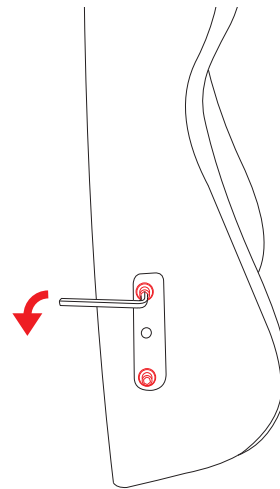

 
- 4 Remove the pre-assembled bolts and washers from the backrest with hex key

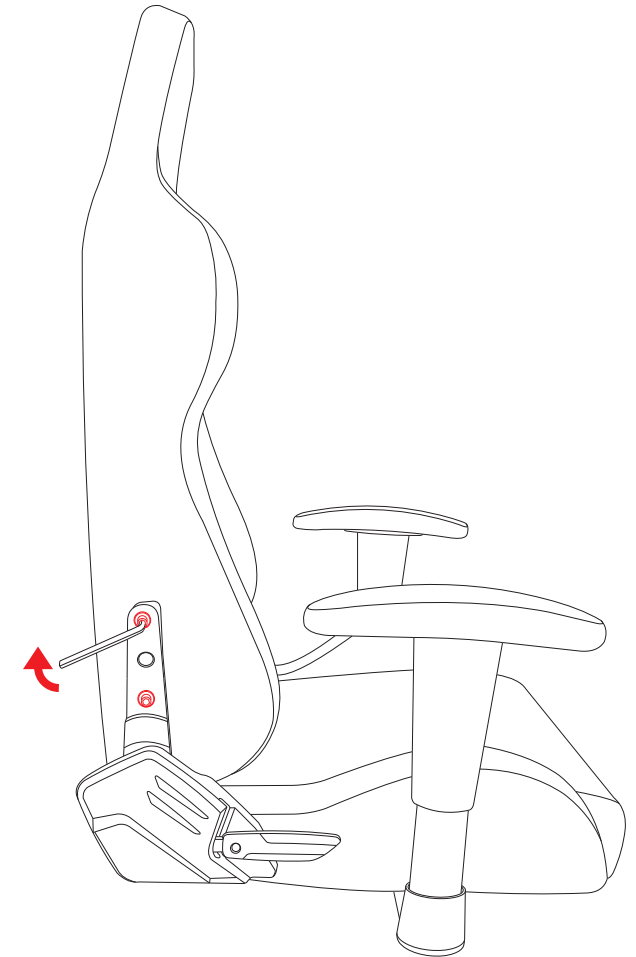


- 5 Remove protective foam covers from the brackets of the seat base. Then position the backrest carefully between the brackets. Insert and tighten all 4 bolts (2 at each side) you prepared in step 4 by hand first. Then use the hex key to tighten them. Start with the two bolts on the top of each side, then the bottom two.

Assembly Instruction

 
Please put on gloves for installation

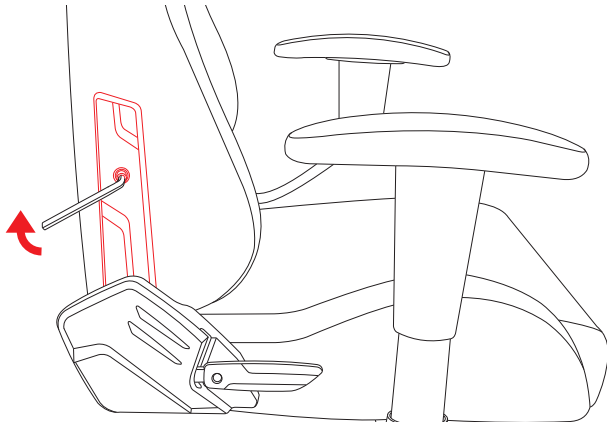

 
- 6 Install the side covers and tighten the bolts. (Inside of the covers marked "L" for left side and "R" for right.)

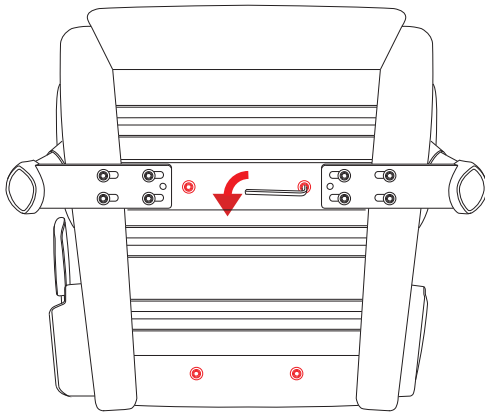

 
- 7 Now flip the chair over, facing down. Then remove the 4 pre-mounted bolts from the underside with washers.

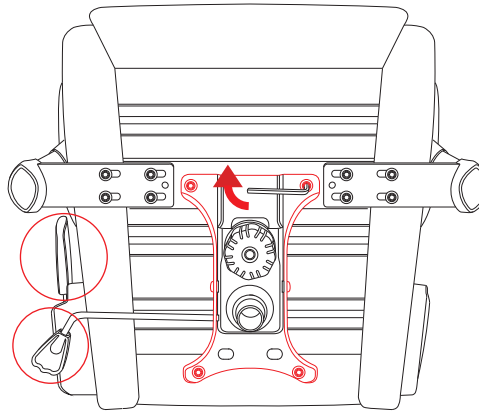

 - 8 Install control unit A:
Place the control unit straight and tighten the bolts. Make sure the "Front" arrow pointing to the front of the chair and the control lever on the same side of the recline lever.

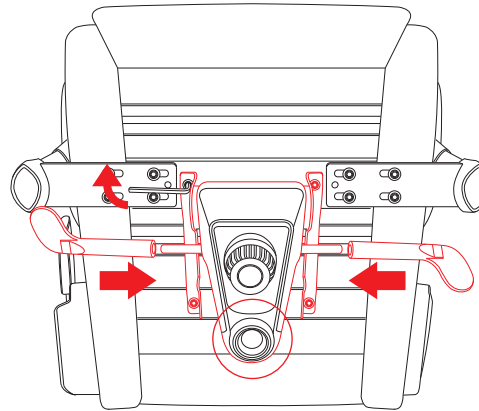

 
- 8 Install control unit B: Same as above and place the hole to mount hydraulic lift cylinder facing the back of the seat (where backrest installed)

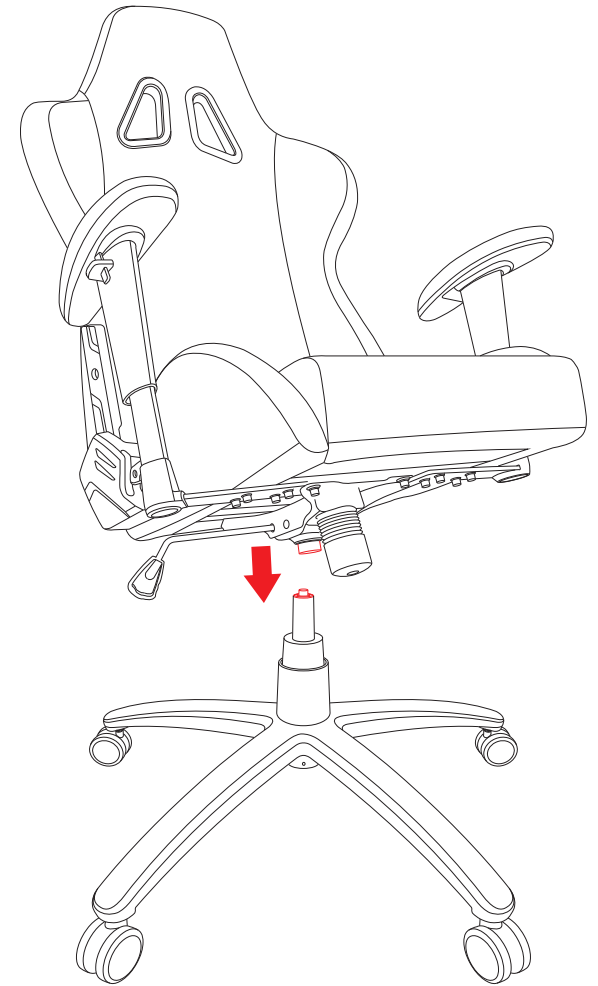


- 9 Insert top of the hydraulic lift cylinder into the mounting hole on the control unit, then turn the chair over in upright position. (Two man handling required for your safety)

Install head pillow and Lumbar cushion

 
Head pillow Method A

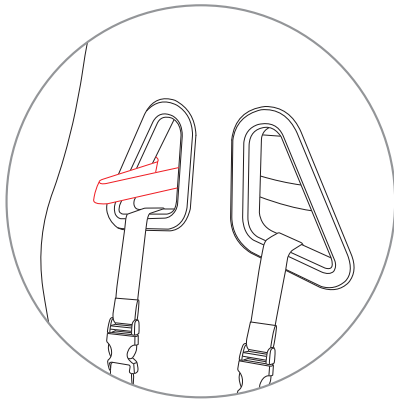

 
- 1 Pull the elastic through the backrest opening

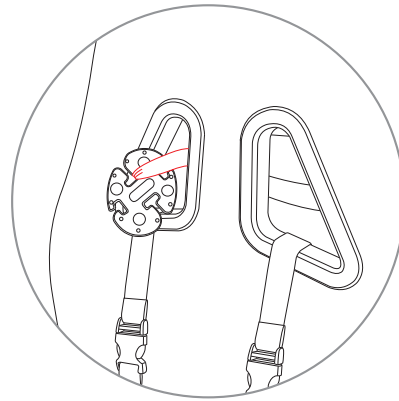

 - 2 Hook the elastic with the connector on one side

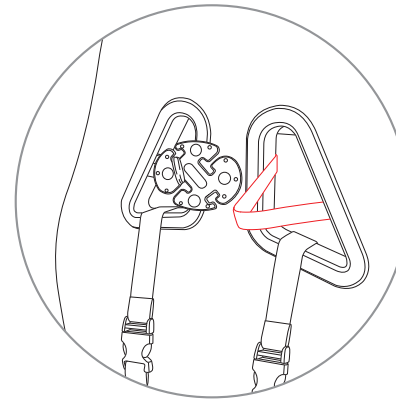


 - 3 Pull the elastic through the other side

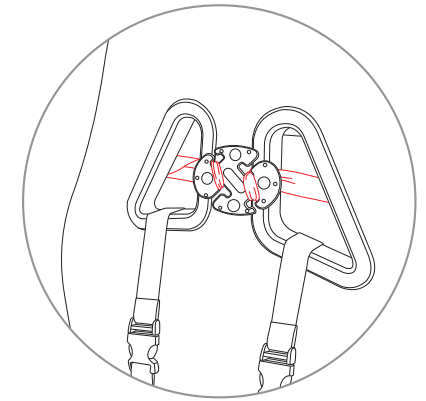


- 4 Hook the elastic with the connector on the other side

 Head pillow Method B

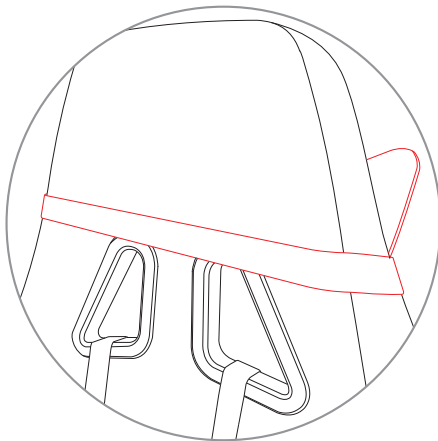


Put the elastic around the top of backrest and adjust the height accordingly

 Lumbar cushion

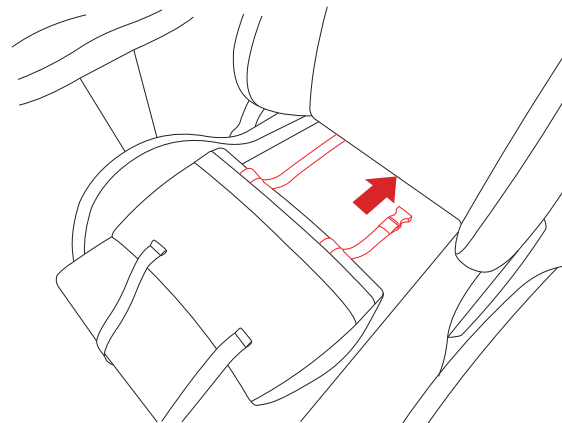

 - 1 Push two bottom straps through the slit between seat bottom and backrest to the back.
*Some models come with Lumbar cushion without straps.

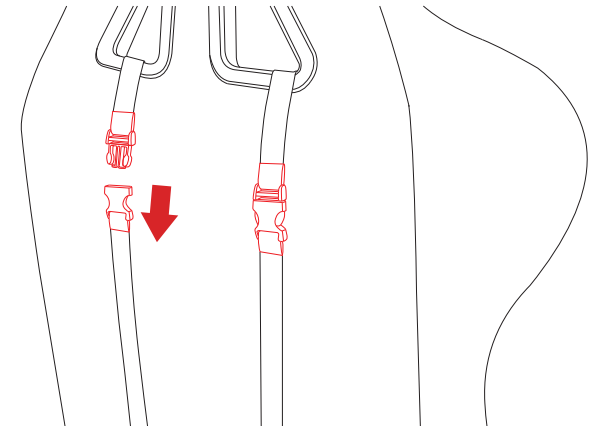


- 2 Put two top straps through the openings on backrest, Pull bottom straps at back and buckle them up. Adjust the height of Lumbar pillow by pull the two straps up and down.

Adjustable functions


For illustration only, refer your actual chair as standard

 Seat adjustment

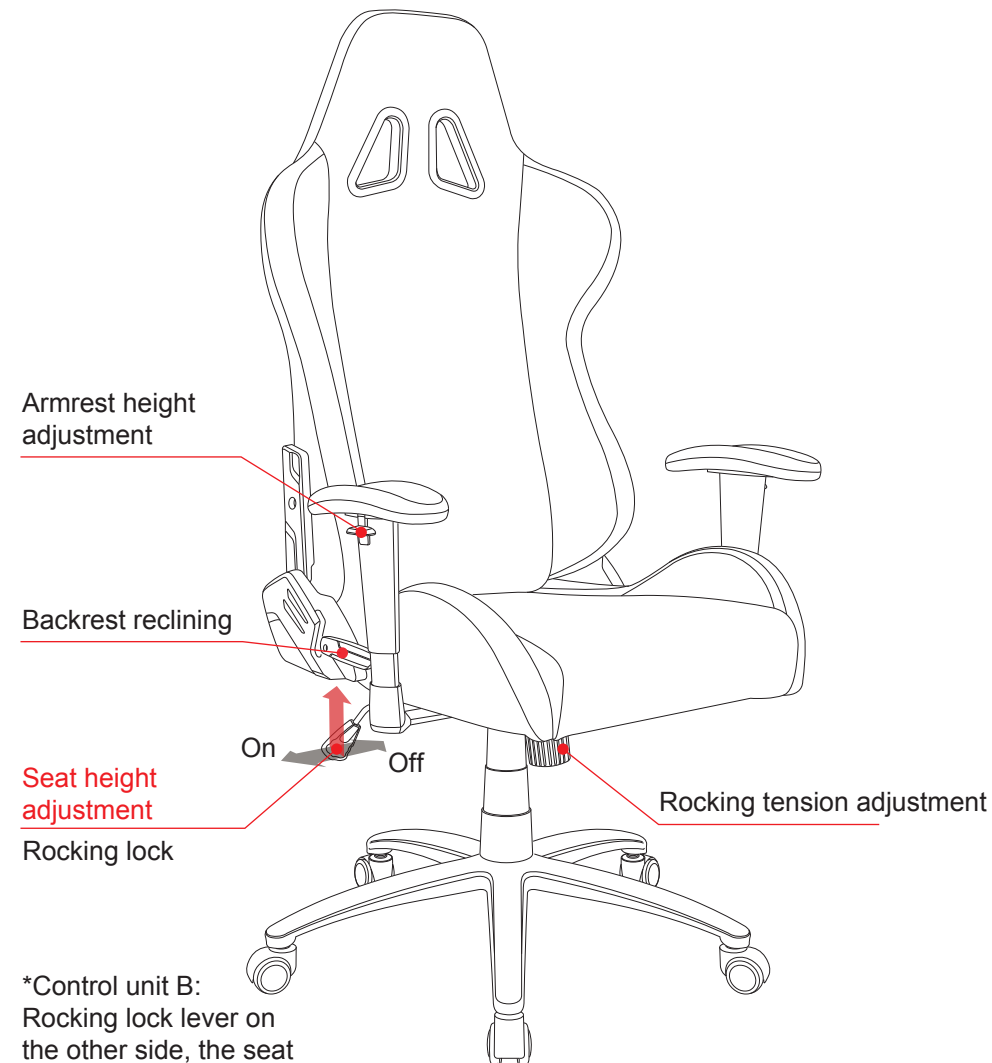


*Control unit B:
Rocking lock lever on
the other side, the seat
base can be locked on
different reclining angles

 
Armrest adjustment

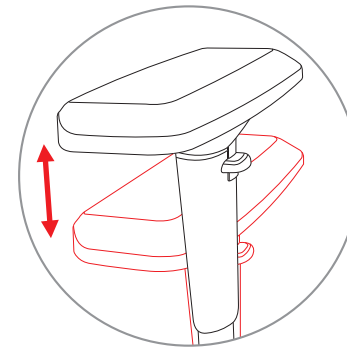


① Height adjustment

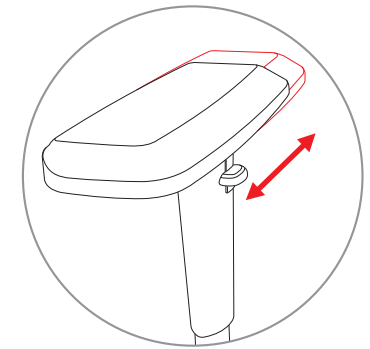 

② Forward and backward

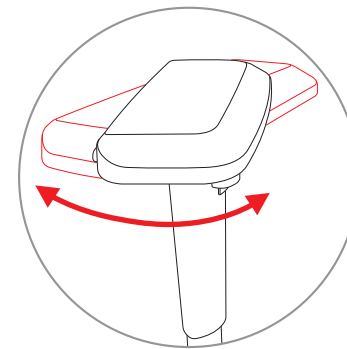 

③ Rotation adjustment

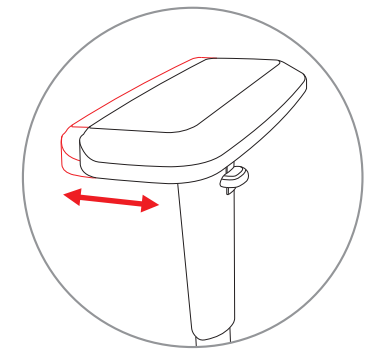 

④ Inward and outward

Attention: There are three types of Armrest, 1D, 3D and 4D.

1D armrest does function 1.

3D does function 1,2 & 3.

4D does all 4 functions above.